



MJCBB2000



CARGO BOX
WILL FIT E-Z-GO® TXT™
INSTALLATION INSTRUCTIONS


INCLUDED:

- 2 MAIN BRACKETS
- 2 BAGWELL BRACKETS
- 2 HARDWARE PACKS



Take off factory brackets and basket from golf cart by removing hardware from each side. Retain hardware. You will need it later.

1

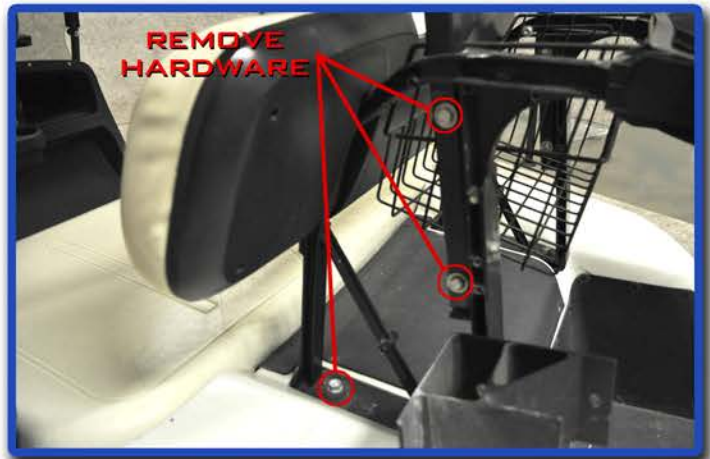

Take the seat back off the cart by removing the two back screws located on each side. Retain hardware. You will need it later.



2



3
Set the rear struts on the frame. There should be nothing attached to the rear of the golf cart as shown in the picture.

4
Attach main bracket to each side of the golf cart using hardware from pack 1.



5
ATTACH
HARDWARE

ATTACH
HARDWARE

6
Attach bagwell brackets to the floor of the bagwell using hardware from pack 2. Attach bagwell bracket to main bracket using hardware from pack 2.

7
Attach rear struts to main bracket on each side using retained hardware from step 1.





7
Reattach seatback using hardware from step 2.

Place the cargo box on the main brackets and align holes. Using remaining hardware from pack 2, insert all bolts into box and then tighten.



CARGO BOX HARDWARE PACKS

HARDWARE PACK 1

BAGWELL BRACKET TO FLOOR OF BAGWELL

(4) 3/8" SHOULDER HEX BOLTS

HARDWARE PACK 3

BAGWELL BRACKETS AT TOP AND BOTTOM

(4) 10MM X 40MM SHOULDER HEX BOLTS

(8) 10MM X 25MM X 2MM WASHERS

(4) 10MM ANTI-SLIP NUTS

HARDWARE PACK 3

CARGO BOX

(4) 10MM X 25MM SHOULDER HEX BOLTS

(8) 10MM X 25MM X 2MM WASHERS

(4) 10MM ANTI-SLIP NUTS