




Sub Harness for Gas Club Car Precedent Installation Instructions for MJGH1000 Addendum for Light Kit Installation

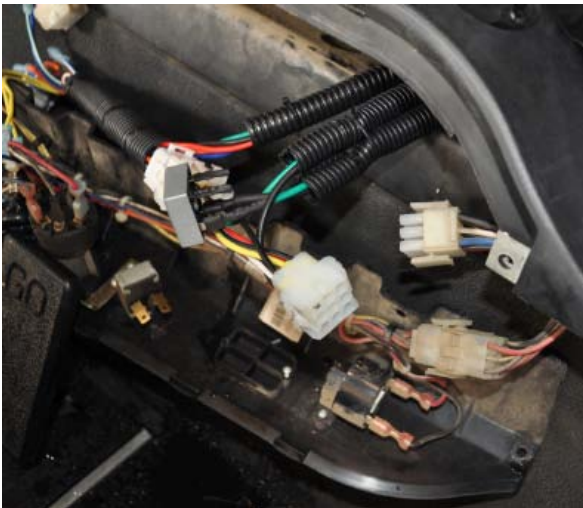

1. (Replaces Step 4 in Light Kit Instructions)

Use the Sub Harness as an adapter between the 12 pin Precedent and the 9-pin main harness behind vehicle dash.



2. Fuse Assembly Addendum.
Disconnect wires from
Fuse/Circuit Breaker.

Connect to Blue Wires under
Vehicle Seat as shown.

Continue with Light Kit
Instructions.

