



## REAR REAR SIDE PLATE INSTALLATION INSTRUCTIONS

01-034



### INCLUDED:


- 2 SIDE PLATES
- SELF TAPPING SCREWS



GO TO [WWW.MYMADJAX.COM](http://WWW.MYMADJAX.COM) FOR MORE  
INSTALLATION VIDEOS AND PRODUCTS.

# 1

Remove three bolts from the armrest. Two are located in the back. One is located towards the end of the armrest. Retain hardware.

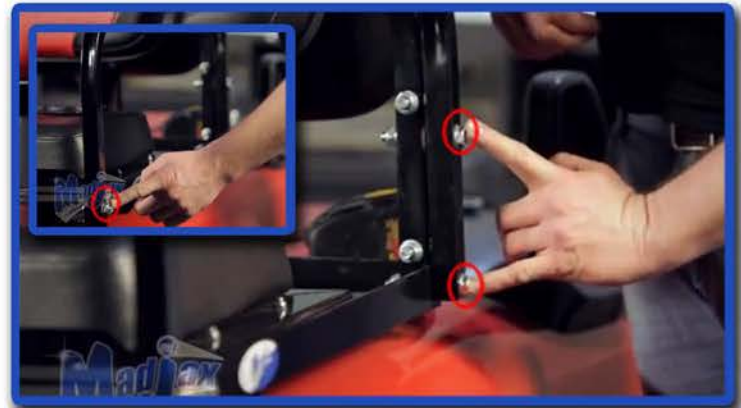

# 2

Using a #2 Phillips tip and a 17mm socket, remove the nut from the front bolt of the armrest. Leave the bolt to support the armrest.






Once the nut from the front bolt and the back two bolts have been removed. Make sure the diamond plate faces outwards and place the side panel between armrest and seat frame.

Hand tighten your nut back on the front bolt.



Attach the two back bolts to the armrest. Once all bolts are in place you can tighten hardware.

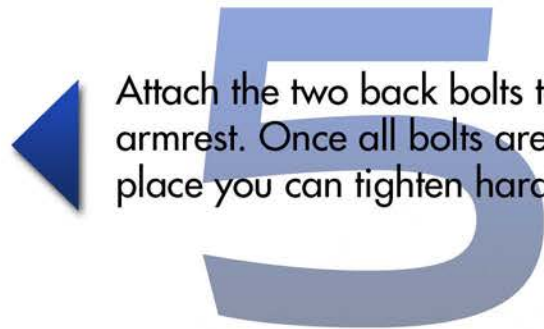

Once hardware is tight, use the self tapping screws to attach the slide plate to the armrest as shown. \*Repeat the entire process on the other side.

